



Position of the Card S81-E2002

The Rack Controller card shall be placed only in the last slot on the right of each rack.

The other 13 slots of the rack can be used for all other type of cards.

This document is not intended to be used for installation purposes. We try to keep our product information up-to-date and accurate. We cannot cover all specific applications or anticipate all requirements. All specifications are subject to change without notice.

Honeywell International Inc.

Industrial Fire Protection

12 Clintonville Road

Northford, CT 06472-1610

+1 203-484-7161

fax: +1 203-484-7118

www.honeywell.com

Honeywell Industrial Training Center

9401 Bay Area Boulevard #400

Pasadena, TX 77507

+1 713-577-1510

Honeywell

HI-60860
January 2015
© 2015 Honeywell International Inc.