


## Display U1006-1

### U1006-1 H-S81-HS Panel Display

The display card is the interface between the panel and the operator. This part is sold as part of H-S81-HS Base Rack.

It is composed of a liquid crystal, LED back-lit, graphic type, with thirty 52-character lines, twenty-three keys, and a buzzer.

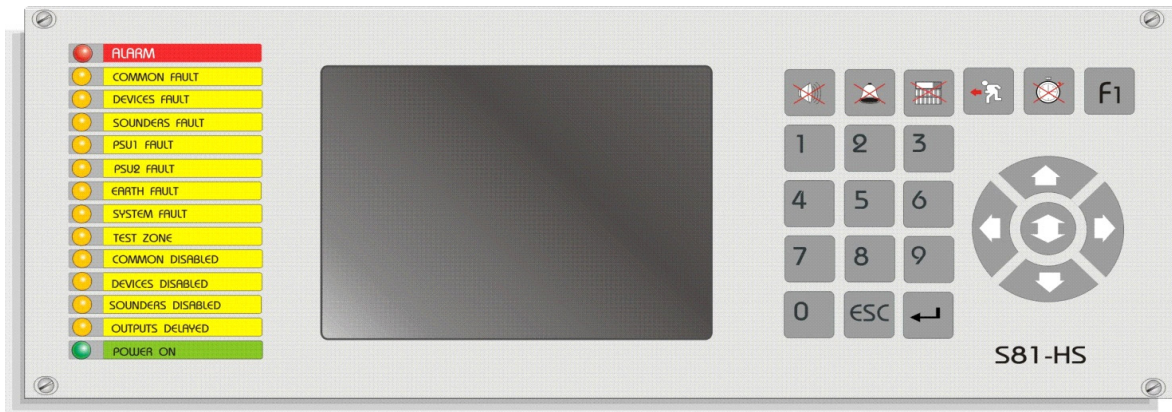

### Main Characteristics












- Large display easily visible due to a wide viewing angle
- Displays all panel status conditions and necessary interactive information for the operator
- Display and LED indications are in accordance with the fire fighting standards EN 54-2
- Access to operator functions is subject to different level passwords
- Polycarbonate membrane, with dust and dirt-proof keys.

PANEL AND LED STATUS	ALARM	TEST ZONE	COMMON FAULT	DEVICES FAULT	SOUNDERS FAULT	PSU1 FAULT	PSU2 FAULT	EARTH FAULT	SYSTEM FAULT	COMMON DIS-ABLED	DEVICES DIS-ABLED	SOUNDERS DISABLED	OUTPUTS DELAYED	POWER ON
Normal status	-	-	-	-	-	-	-	-	-	-	-	-	-	⊗
Zone Testing	-	∅	-	-	-	-	-	-	-	-	-	-	-	-
Common fault	-	-	∅	-	-	-	-	-	-	-	-	-	-	-
Card fault	-	-	-	∅	-	-	-	-	-	-	-	-	-	-
Signaling fault	-	-	-	-	∅	-	-	-	-	-	-	-	-	-
Power supply fault	-	-	-	-	-	∅	∅	-	-	-	-	-	-	-
Leakage to earth	-	-	-	-	-	-	-	∅	-	-	-	-	-	-
System fault (CPU)	-	-	-	-	-	-	-	-	∅	-	-	-	-	-
Disabling in progress	-	-	-	-	-	-	-	-	-	⊗	-	-	-	-
Devices disabled	-	-	-	-	-	-	-	-	-	-	⊗	-	-	-
Sounder output disabled	-	-	-	-	-	-	-	-	-	-	-	⊗	-	-
Outputs delayed	-	-	-	-	-	-	-	-	-	-	-	-	⊗	-
Alarm not acknowledged	∅	-	-	-	-	-	-	-	-	-	-	-	-	-
Alarm acknowledged	⊗	-	-	-	-	-	-	-	-	-	-	-	-	-
LED status legend	⊗ = on    ∅ = blinking    - = off													

## Possible Actions Through Keys

OPERATOR'S ACTIONS	Level 1	Level 2 Operator	Level 3 Maintenance
Silencing of panel alarms	OK	OK	OK
Cancellation of control delay	OK	OK	OK
Displaying of alarm and fault status	OK	OK	OK
Silencing and activation of evacuation sounders	-	OK	OK
Include, exclude and reset functions	-	OK	OK
Displaying of event history and exclusions	-	OK	OK
Testing of panel, zones and devices	-	OK	OK
Modification of date and time	-	OK	OK
Access to system configuration functions	-	-	OK
Access to diagnostics functions	-	-	OK

## Key Descriptions

ACCESSIBLE FUNCTIONS THROUGH KEYS			
Icon	Meaning	Level	Function
	Panel alarm silencing	1-2-3	Silences panel buzzer
	Sounder alarm silencing	2-3	Silences of general alarm horns in the system
	Panel reset	2-3	Resets all panel and detection line alarms, detectors included
	Evacuation command	2-3	Activates system audible alarms for evacuation
	Delay time setting	1-2-3	Annuls delay time count on active actuators
	Selection cancellation	1-2-3	Back to previous page
	Scroll	1-2-3	Enables display of complete list within operator's cycle menu
	Directions within menus	2-3	Enables navigation in panel access and operation menus
	Numerical keys 0-9	1-2-3	Enable entering passwords and making selections in menus
	Enter	1-2-3	Confirms selection during access operations to panel menus
	Function F1	1-2-3	Varies depending on access level and panel status.

## Further Indication

Display rear side LEDs	Function
LD 15	Currently not used
LD 16	Currently not used
Link CPU-A	Communication with CPU-A
Link CPU-B	Communication with CPU-B
Link T8004-1	Communication with card T8004-1